




Remote Behavior when programmed to TV and Audio System

If the remote has been programmed to the TV and Audio Systems as described on the previous page, the remote's TV power button () will control the TV power only.

This will not affect the powered state of the STB. The "all devices" power button () will control the TV power as well as the STB and audio system power states if remote has been fully programmed with TV and Audio system.

The "all devices" power button () may be used in two ways while system is fully powered on:

Short Press: Will turn off TV and Audio sub-system and put the STB into a standby mode.

Long Press: User will be prompted if they want STB to be powered down (non-standby) mode. If OK is selected, the TV, Audio system, and STB will all be powered down. The STB will be fully powered down and not be in standby mode.