



TV/ Remote Programming

By default, the remote controls the Volume on the TV, and Power to the STB. To program the remote to the TV, so that the remote Master Power key will adjust Power and Volume on the TV by Infrared command directly, follow the Instruction below:

- Press and hold the **Set** key until the remote LED turns green.
- Enter the 5-digit code as shown in **Appendix A**.
- Successful programming is indicated by two green blinks of the LED
- Unsuccessful programming is indicated by two red blinks of the LED