

# Remote Battery Installation

*The remote requires two AA batteries.*

*Hold the remote with keys facing the floor. Battery cover is the entire back of the remote.*



*Using the ridges, slide the back cover towards the bottom of the remote, remove the cover and insert batteries in the direction shown.*

## Battery Monitoring

The remote has ability to output battery status. Follow the steps below to check Batteries:

- Press and hold the **Set** key until the remote LED turns green.
- On the remote Press **9 9 9** .
- If the Green LED blinks 4 times, battery status is excellent.
- If the Green LED blinks 3 times, battery status is good.
- If the Green LED blinks 2 times, battery status is low.
- If the Red LED blinks 1 time, battery status is very low and need to be replaced.